

FUNCTION INSTRUCTION

No	Shows	Value	Function & Instruction
1	d001	001- 512	DMX Address Set (6CH Mode)
2	A001	001- 512	DMX Address Set (10CH Mode)
3	r255	000 - 255	Red Dimmer (Dark to Bright)
4	G255	000 - 255	Green Dimmer (Dark to Bright)
5	b255	000 - 255	Blue Dimmer (Dark to Bright)
6	u255	000 - 255	White Dimmer (Dark to Bright)
7	Y255	000 - 255	Amber Dimmer (Dark to Bright)
8	P255	000 - 255	UV Dimmer (Dark to Bright)
9	FH99	01 - 99	Strobe Since5, Slow to Fast RGBUY Choose Color.
10	CL01	01 - 08	8Colors output
11	CC01	01 - 99	Colorful jump change Slow to Fast
12	DE99	01 - 99	Colorful Gradual change Slow to Fast
13	CP99	01 - 99	Colorful compounding Change Slow to Fast
14	SU01	01 - 09	1-8 Strobe 9 Sound-Active Color Change

SPECIFICATIONS

Simple operation, no-flash dimmer. Can be adapted for camera shooting/ TV Studio/ Stage etc.

Power Supply: AC90~240V Widely Voltage Range

Shape Crust: Aluminum Casting

Light-Source: 18 x 18W RGBWA+UV 6in1 LEDs

Channels: 6CH or 10CH DMX512

Control Mode: Sound Active -Master/ Slave -Automatic -DMX512

Slim PAR 1818

Par Light Indoor



Use Manual

Professional Stage Lighting Equipment

SUMMARIZE

Thank you for using our company's products. For your own safety, please read this user manual carefully before installing the device. This manual covers the important information of installing and using. Please install and operate following the manual book. Meanwhile, please keep this manual well for using at anytime.

NOTICE

Please read this instruction carefully before installation:

1. Inspect the device carefully before installation in case of loose for transportation maintenance regularly.
2. Don't put the product on the shakable or moist place.
3. Please keep the voltage stable, otherwise the bulb would be broken easily.
4. To guarantee the lifespan of product, keep in dry and cool. Avoid working on 40°C or above.
5. Disconnect the power before installation or removing. In case of malfunction, ask professional technician to repair.

KEYSTROKE INSTRUCTION



MENU:

- 1~ Press MENU can show Different functions (See the Form)

UP:

- 1~ Keep pressing this can up (add) always.
- 2~ Press once this that the value adds 1.

DOWN:

- 1~ Keep pressing this can down (reduce) always.
- 2~ Press once this that the value reduces 1.

ENTER:

- Save

CHANNEL INSTRUCTION

6 DMX Channels Mode (d001)

No.	Function	Instruction
CH1	Red Dimmer	Red liner dimmer, dark to bright.
CH2	Green Dimmer	Green liner dimmer, dark to bright.
CH3	Blue Dimmer	Blue liner dimmer, dark to bright.
CH4	W Dimmer	W liner dimmer, dark to bright.
CH5	Amber Dimmer	Amber liner dimmer, dark to bright.
CH6	UV Dimmer	UV liner dimmer, dark to bright.

10 DMX Channels Mode (A001)

No.	Function	Instruction
CH1	Total Dimmer	RGBW total liner dimmer, dark to bright.
CH2	Red Dimmer	Red liner dimmer, dark to bright.
CH3	Green Dimmer	Green liner dimmer, dark to bright.
CH4	Blue Dimmer	Blue liner dimmer, dark to bright.
CH5	White Dimmer	White liner dimmer, dark to bright.
CH6	Amber Dimmer	Amber liner dimmer, dark to bright.
CH7	UV Dimmer	UV liner dimmer, dark to bright.
CH8	Total Strobe	RGBW total strobe, slow to fast.
CH9	Function Choose	0—50: DMX 8CH Control 51—100: Color Output 101—150: Color Jump Change 151—200: Colors gently Change 201—250: Colors pulsant Change 251—255: Sound Activities
CH10	Function Speed	Function speed, slow to fast.